











# // USER MANUAL

Description : Full motion monitor arm


Model No : CTM500

 Thanks for buying the product. Please read this manual carefully before you start installing.







## Spec Data

										Desk thickness range	
LCD Size	Weight Capacity	Height Adjust	Tilt	Swivel	Pivot	VESA	Packing Size	Net Weight	Cross Weight	Thru desk	Desk clamp
≤32"	≤8		-10°~ +90°	180° /360°	±90°	75×75 100×100	845*465*135	Inner:	Inner:	15-50	15-50

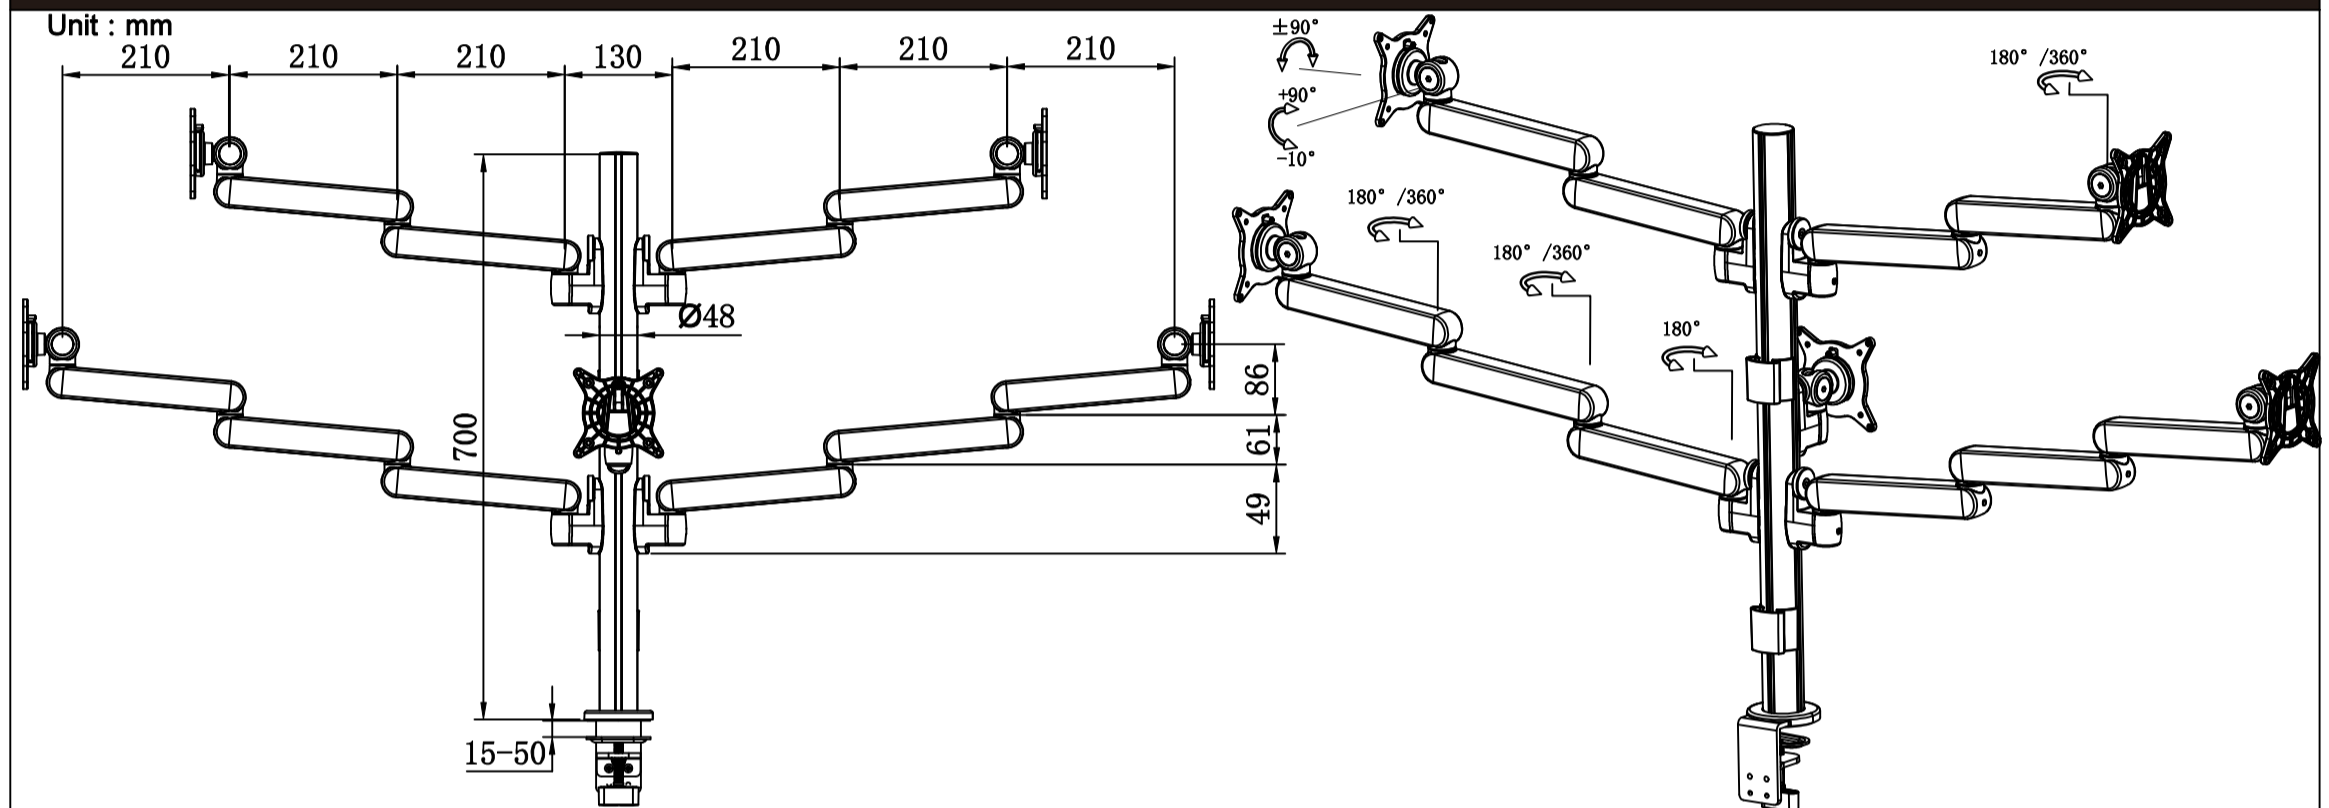





## Product Dimension



## Parts List


No.	Image	Part No.	Quantity
A			1
B			2
C			2
D			1
E			5
F			1

## Parts List


No.	Image	Part No.	Quantity
a		M4x16	20
b		6#	1
c		4#	1
d			15
e		M8×80	1
f			1

## Base installation

### 1 Desk clamp installation

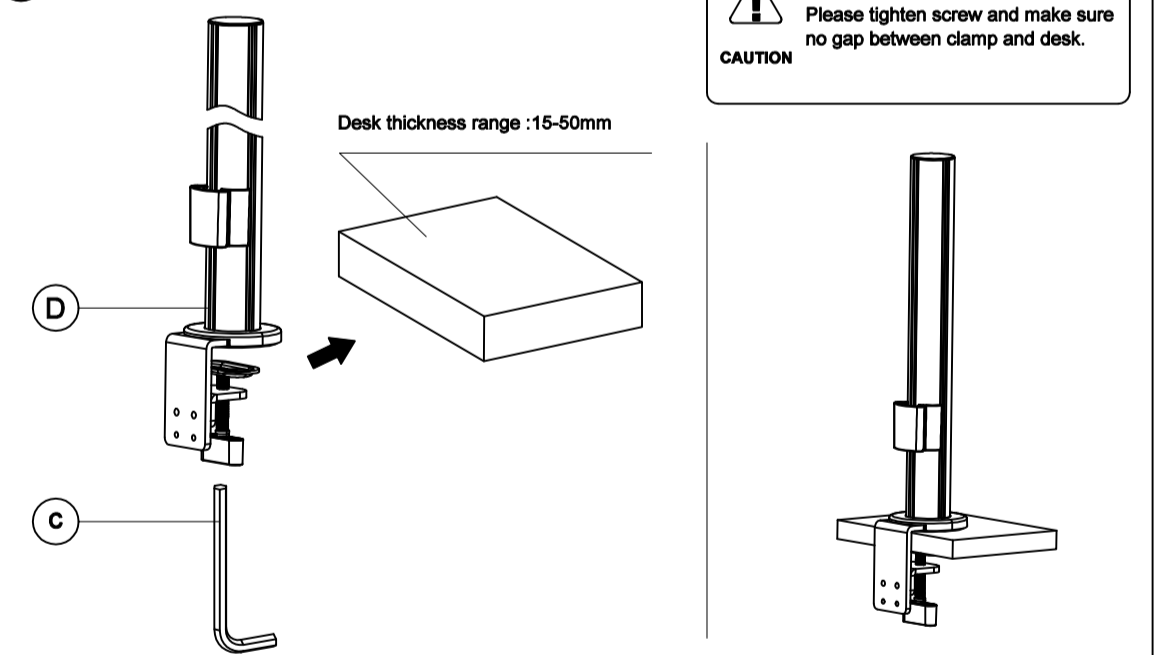


### 2 Thru-desk installation

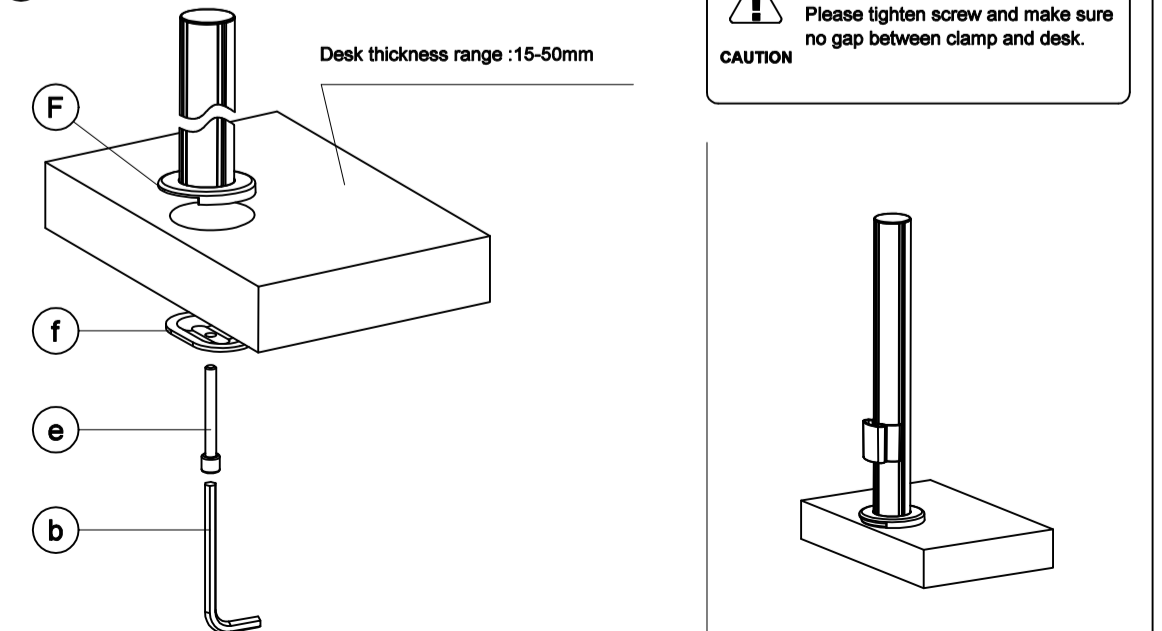


Installation Procedure


1 VESA plate installation

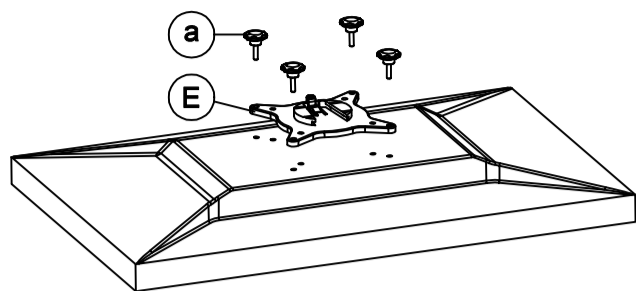


2 Static arm installation

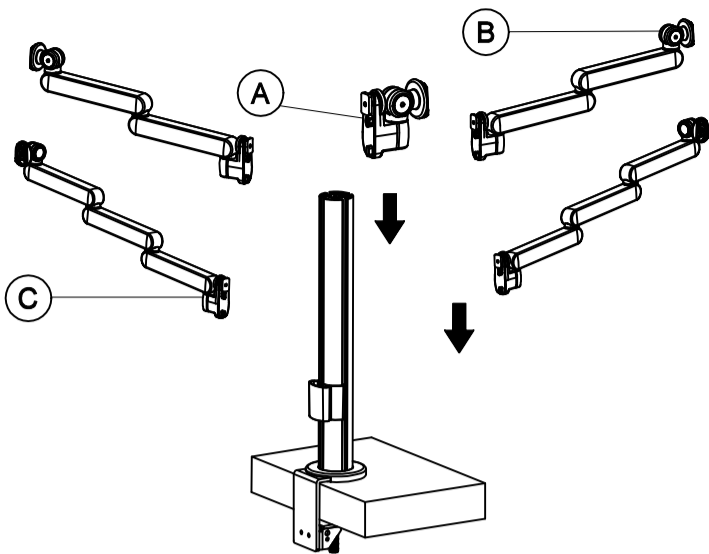







3 Insert head assembly into dynamic arm

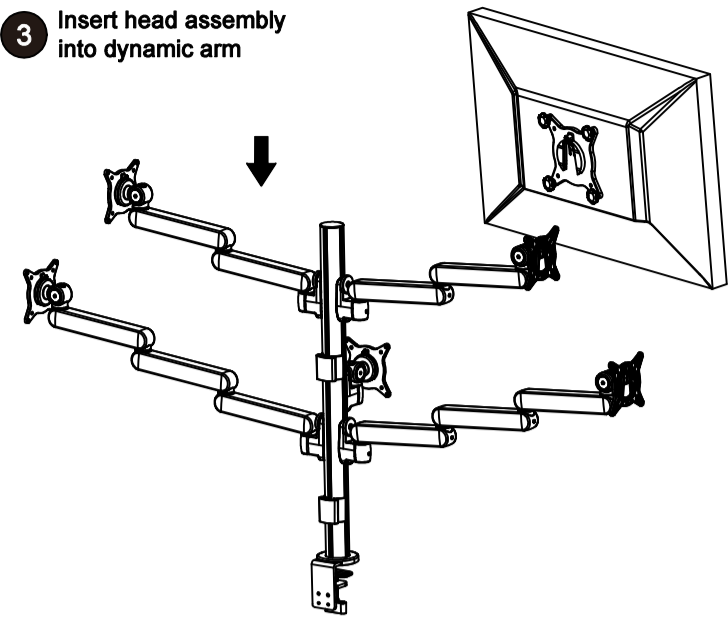

4 Cable manager installation

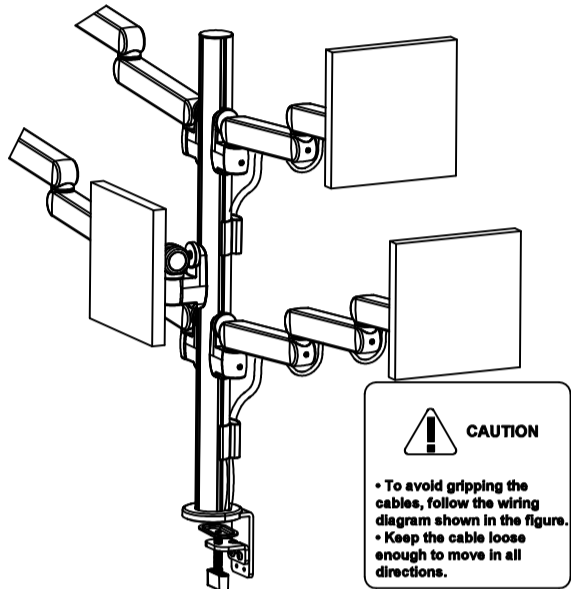


Rotation limit

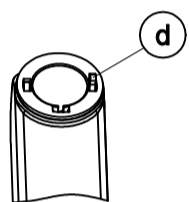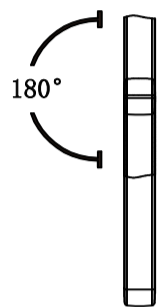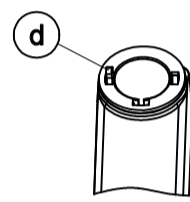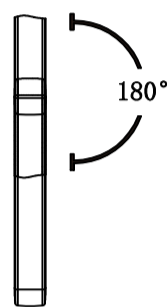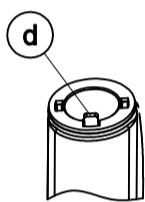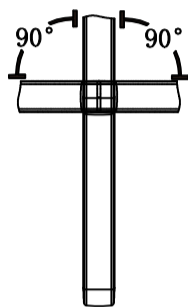


Adjustment steps


1

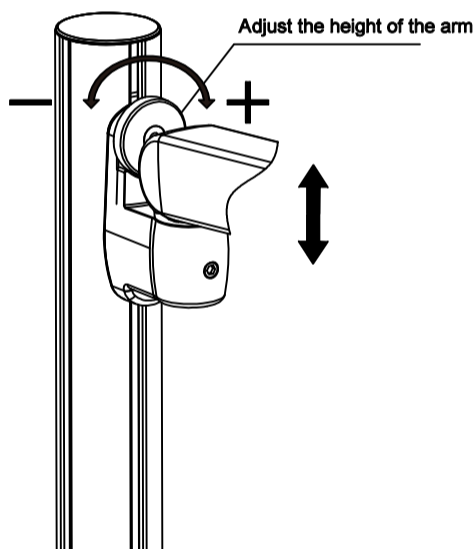

2 Pivot /Tilt adjustment

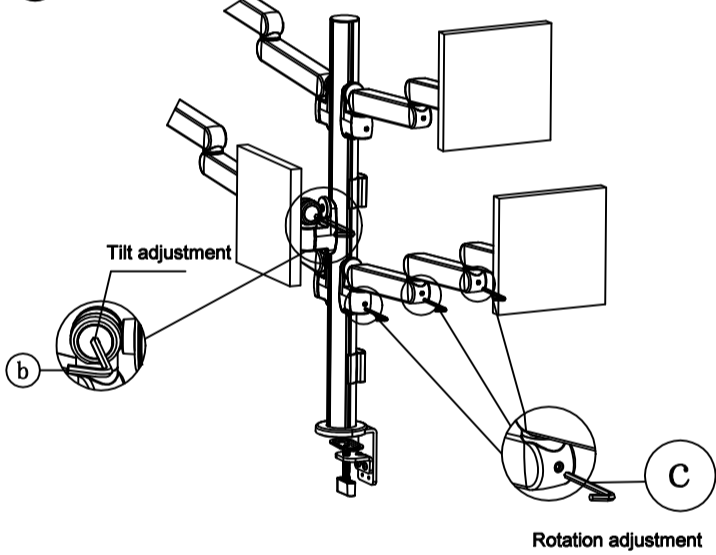

3

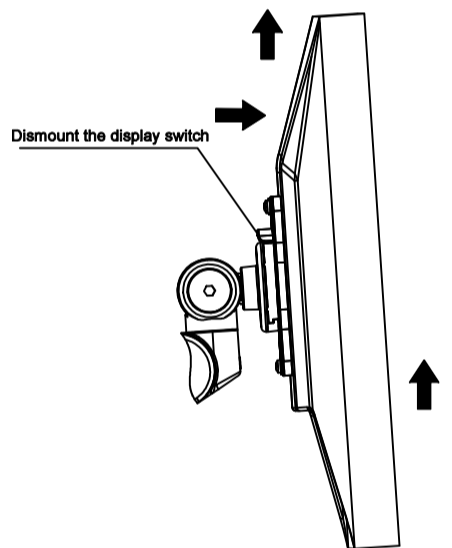

- 1.Never overload it. Otherwise,it may cause damage to monitor or human body.
- 2.Please strictly follow the procedures in this manual for installation.Wrong installation may cause damage to product or human body.
- 3.Please use the tools and parts provided by us.Otherwise, it may cause damage to product.
4. Make sure you desk/table is strong enough to support the product and all its parts
5. This product contains small parts.It will cause personal injury if swallowed.Please put them beyond the places where children can reach
6. Please install monitor after assembling this product
7. Please make sure your monitor is fixed properly before you adjust it
8. Please don't disassemble or exchange the arm of this product arbitrarily.



**WARNING**

